

DIY Grease Refilling Procedure

(DIY by 5 Gallons Air grease pump)

Step 1:

Using a 5 gallons grease pail with Air grease pump to fill the empty cup. (Fig1).

Note : Make sure there is fresh grease discharge from air grease pump before refilling the cup.



(Fig 1)

Step 2:

Lock P-400G to outlet nipple and clean out the grease before refilling. (Fig 2).



(Fig 2)

Step 3:

Fix the empty cup to air grease pump nipple.

(Fig 3)



(Fig 3)

Step 4:

Resist the piston (inside the cup) and start to fill grease into a new empty cup with Air grease pump. (Fig 4).

Note : Using fingertip to resist one side of the piston; when grease fills into empty cup, the pressure will make piston inclined for releasing the air bubble out.



(Fig 4)

Step 5:

During the refilling process, resist the piston (Fig 5 & 6) until the grease is completely refilled (The piston now is ascend to the top)



(Fig 5)



(Fig 6)

Step 6:

When refilling process is completed, hold the cup to tap on a thick board or rubber mat until the air bubble is all exit (Fig 7), then flat the piston when it's finished.

Warning : Take notice to protect your eyes when excessive force may damage the cup and spray out the grease.



(Fig 7)